



Philips Series 1000
Air Purifier

Night sensing mode

Room size: up to 63 m²
Partial CADR: 270 m³/h
VitaShield IPS



AC1215/30

Healthier air, always

Cleaner Nights, Energized Days

Night sensing mode is a new technology especially designed for your bedroom. Be reassured of constant air quality monitoring and clean air delivery while you sleep. It is quiet as whisper to help you and your family sleep better.

Always

- Child lock prevents unintended changes in settings
- Healthy air protect alert for filter lifetime with accuracy
- Certified or tested by ECARF and Airmid
- Quieter and constant clean air delivery during sleep
- Real-time air quality feedback

Healthy Air

- Advanced NanoProtect Filter delivers all-around protection
- Special auto mode effectively removes pollution
- Superior Purification that can be applied to max 63m² room


Design for you

- Touch UI with display

PHILIPS

Highlights

VitaShield IPS

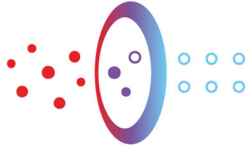

VitaShield IPS

Vitashield IPS with its aerodynamic design and NanoProtect Pro Filter has a boosted clean air delivery rate up to 270 m³/hr. It can effectively remove ultra-fine particles as small as 0.02µm. Also it filters out harmful gases such as formaldehyde and TVOC.

Filter HEPA Series 1

The extra thick NanoProtect HEPA is designed for superior purification efficiency and lifetime against airborne particles.

Auto Mode



Indoor PM_{2.5} levels can increase far above local guidelines because of outdoor pollution or daily activities like cooking, cleaning etc. The smart air sensor can detect PM_{2.5} levels and

boost the air purifier's speed to deal with the pollution.

Night sensing mode



Night sensing mode is developed especially for your bedroom; The air purifier rapidly prepares your bedroom air for sleep and constantly monitors your bedroom air quality, delivering clean air while you sleep. The dimmed and/or switched off lights and the low sound help you and your family sleep better.

Healthy air protect



The healthy air protect alert lets you know promptly when it is time to replace the filter. If the filter is not replaced promptly, the appliance stops functioning - to avoid

ineffective purification. So you are assured of healthier air always.

Child lock



Child lock prevents unintended changes in settings

Real-time air quality feedback

The color ring on dashboard provides a clear view on air quality by 4-step color, ranging from blue (good allergen & particle level) to red (bad allergen & particle level).

Certification



Certified or tested by ECARF and Airmid*

Touch UI

Touch UI with display

Specifications

Design and finishing

- Air quality sensor(s): Particle
- Color of control panel: Black
- Control panel type: Touch
- Fan speed indicators: 1,2,3,-Turbo
- Color(s): White

Performance

- Filters out PM2.5: 99 %
- Filters out viruses: 99.9 %
- CADR (cigarette smoke): 270 m³/h
- Filters out bacteria: 99.9 %

Technical specifications

- Cord length: 1.8 m
- Effective area: Up to 63 m²
- Frequency: 50 Hz

- Power: 50 W
- Sound level: 33 dB(A)
- Voltage: 220 V

Country of origin

- Made in: China

Service

- 2-year guarantee

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Weight and dimensions

- Dimensions of product (LxWxH): 541 x 325 x 211 mm



Issue date 2017-02-28

Version: 5.0.1

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com